

Bermad Electrically Controlled Deluge Valve with EasyLock Manual Reset

Model: 400E-2M/700E-2M

INSTALLATION OPERATION MAINTENANCE

Application Engineering

BERMAD



BERMAD Fire Protection

400E-2M/700E-2M IOM

Safety First

BERMAD believes that the safety of personnel working with and around our equipment is the most important consideration, read all safety information below before attempting to perform any maintenance function. Only authorized personnel should perform all maintenance tasks. Comply with all approved and established precautions for working with the equipment and/or environment. When performing a procedure, follow the steps in succession without omission.

Description

The Bermad Electrically Controlled Deluge Valve is suitable for automatic water spray or foam deluge systems that include electric detection and piping systems with open nozzles.

This Bermad Deluge Valve is equipped with an EasyLock Manual Reset (M) (EMR) device, which locks it into an open position during fire detection and system activation. The Deluge Valve is operated by an electric Solenoid Valve and requires a listed System Control Panel with a compatible electrical fire detection system.

In Fire condition, activation of the detection system causes the System Control Panel to be activate, this in turn opens the Solenoid Valve (14B), causing the Bermad Deluge Valve (1) to open, and thereby allowing water to enter the system piping. Whenever either the Solenoid or the Manual Emergency Release (15B) is activated, the EMR locks the Deluge Valve in its open position. The Bermad Deluge Valve will close again only when the reset button on the EMR is pressed.

Approvals/Listings

The Bermad Deluge Valve is UL Listed only when installed with specific components & accessories. Refer to current UL Directory. Consult the manufacturer for any component approval recently to appear in the UL fire protection equipment directory.

Installations

NOTES:

- ◆ Wet Pilot height (if mounted) should not exceed that appearing on Table 1, "Maximum Elevation Above Valve".
- ◆ Any deviation in trim size or arrangement may adversely affect the proper operation of the Deluge Valve.
- ◆ All initiating devices (detectors), indicating appliances, releasing devices, wet pilot line actuation devices (such as thermostatic releases, and/or fixed temperature releases), as well as the system control panel, must be compatible and UL listed for use with the particular Deluge System. Refer to current "UL Listed Fire Protection Equipment Directory". Refer also to NFPA 13 or the applicable installation standards, codes and authorities having jurisdiction.

WARNING: The Deluge Valve and trim must be installed only in areas where they will not be subjected to freezing temperatures.

Installation Instructions

1. Allow enough room around the valve assembly for any adjustments and future maintenance/disassembly work.
2. Before the valve is installed, flush the pipeline to remove any dirt, scale, debris, etc. Not flushing the line may result in the valve being inoperable.
3. Install the valve in the pipeline with the valve flow arrow on the body casting in the proper direction. Ensure that the valve is positioned so that the cover/actuator can be easily removed for future maintenance.
4. Ensure that the EMR is Mounted Vertically (with the reset button up), and all other components are positioned correctly as per the appropriate drawing.



BERMAD Fire Protection

400E-2M/700E-2M IOM

5. The water supply priming line must be connected to the upstream of the system control valve.
6. Subjected to all other instructions, drawings and technical specifications, which describe Bermad Deluge Valve, install in their proper positions the components comprising the Deluge Trim Package, according to the drawing relevant to the specific type, hereby enclosed.
7. Install also the additional accessories, which appear in the drawing and which must be installed as shown in the drawing, although they are not packed together with the Bermad Deluge Valve itself.

Table 2: Deluge Valve Equivalent Length Value (Steel Pipe), for use in hydraulically calculated systems

400E

Valve Size	Equivalent Length Value Meter (Ft)
2"	9.1 (30) of 2" pipe
2½"	12.1 (40) of 2½" pipe
3"	13.7 (45) of 3" pipe
4"	14 (46) of 4" pipe
6"	27.4 (90) of 6" pipe
8"	45.7 (150) of 8" pipe

700E

Valve Size	Equivalent Length Value Meter (Ft)
2"	11 (36) of 2" pipe
2½"	26.2 (86) of 2½" pipe
3"	17.4 (57) of 3" pipe
4"	28.7 (94) of 4" pipe
6"	32.6 (107) of 6" pipe
8"	49.1 (161) of 8" pipe
10"	64.3 (211) of 10" pipe

Electrical & Solenoid Requirements

The Solenoid Valve shall be wired to the Releasing Control Panel according to information provided by the control panel manufacturer.

Standard Solenoid data (others are optional):

- ◆ Voltage: 24VDC
- ◆ Normally Position: NC
- ◆ Enclosure Type: 1,2,3,3S, 4 and 4X/IP-65 (For Hazardous Locations enclosure, see catalog)
- ◆ Electrical Rating: 10.6 Watt / F (0.44 Amp) or less

Ancillary/Optional Equipment

- ◆ If required, provide an Alarm Pressure Switch (P), to either activate an electric alarm, or shut down desired equipment. Connect it according to manufacturer instructions.
- ◆ If required, provide a Water Motor Alarm, it shall be assembled and installed according to instructions within it's package.
- ◆ It is recommended practice to provide an "Inspector's Test Connection" on the hydraulic release system. The inspector's Test Connection should be equipped with a ball valve (normally locked closed) capable of being opened to simulate the opening of a release.

Operation

Principle of Operation

In the SET position, the line-pressure supplied to the main valve's control chamber via the priming line and through the EMR, is trapped by the EMR's internal check valve, by a closed 2-Way Solenoid Valve (14B), and by a closed Manual Emergency Release (15B). The trapped pressure holds the main valve's diaphragm and plug against the valve seat, sealing it drip-tight and keeping the system piping dry.

In FIRE or test conditions, an electric detection system, through a control panel, triggers the Solenoid Valve to a open position, pressure is released from the control chamber by the opened Solenoid Valve or Manual Emergency Release. The EMR prevents line-pressure from entering the control chamber,

Rev 14/5/04
By: D. Eshel

BERMAD Fire Protection

400E-2M/700E-2M IOM

latching the main valve open and allowing water to flow into the system piping and to the alarm devices.

WARNING: Whenever the handle of the Emergency Manual Release (15B) is pulled, the Deluge Valve opens, and water flows into the system's piping and to the alarm devices, the Deluge Valve will close again only when the handle of the Emergency Manual Release is returned to its original position and the reset button on the EMR is manually pressed.

Placing in Service/Resetting the System

1. Place the detector circuit in service.
2. Reset the Solenoid Valve (14B) by resetting the releasing control panel.
3. **Close** all emergency release valves.
4. Test supervisory circuits in releasing control panel.
5. **Open** the priming-line valve (18B). Check that there is no water flow from the Solenoid Valve.
6. **Push** and hold the **EMR's** reset button, this allows upstream water pressure to fill the Deluge Valve's control chamber.
7. When the control chamber pressure gauge (3A) indicates full upstream pressure and is no longer rising, the release system is reset.
8. Slowly **Open** the supply Isolating Valve and check that no water flows into the system.
9. **Depress** the Drip Check (19B) and drain any water from the system side of the Deluge Valve.

The system is now operational and in a standby mode.

Ensure that the following Set Conditions are met.

Set Conditions (Normal Conditions)

Item	Status
All Main Isolating Valves	OPEN and sealed with tamperproof seals
All Manual Releases	CLOSE position and sealed
Alarm Shut-Off Valve (11A)	OPEN position
Priming Ball Valve (18B)	OPEN
Control-Chamber Gauge	OPEN gauge valve, the Pressure Gauge indicates rate of pressure in Control-Chamber
Upstream Pressure Gauge	OPEN gauge valve, the Pressure Gauge indicates the upstream supply pressure to the Deluge Valve
Drip-Check Device (19B)	VENTED: Push the knob to confirm that there is no leakage.
Control Panel & Detections	Are in service and in a stand-by position.
Releasing Devices	CLOSED with no leaking

Maintenance

Removing The System From Service

WARNING: When taking deluge system out of service, a fire patrol should be established in the system area. If automatic fire-alarm signaling equipment is utilized, the proper authority should be notified that the system is being removed from service. The insuring body and owner representative should also be notified when the system is being taken out of service.

Removing Instructions

1. **Shut off** the main supply-isolating valve.
2. **Close** the Priming line valve (18B) to Deluge Valve Control chamber.

Rev 14/5/04
By: D. Eshel



BERMAD Fire Protection

400E-2M/700E-2M IOM

3. **Open** all drain valves.
4. **Release** the water pressure from the control chamber of the Deluge Valve by pulling the Manual emergency release (15B).
5. If auxiliary power is used, disconnect the power supply and batteries.
6. Place "Fire Protection System Out of Service" signs in the area protected by the system.

Inspection and Testing

1. **WARNING:** Do not turn off the water supply to make repairs without placing a roving fire patrol in the area covered by the system. The patrol should continue until the system is back in service.
2. Prior to turning off any valves or activating any alarms, notify local security guards and the central alarm station, if used, so that a false alarm will not be signaled.
3. In any of the following inspections or testing procedures, if an abnormal condition exists, see Abnormal Conditions for possible cause and corrective action.
4. See NFPA Pamphlet No. 25 and also relevant publications by authorities having jurisdiction.

Weekly Inspection

1. The system should be checked for Set Condition. See above "*Set Condition (Normal condition)*".
2. Observe the upstream pressure gauge (3A) : it should indicate that the normal supply of water pressure to the Deluge Valve is maintained.

Monthly Inspection and Test

1. Complete Weekly Inspection.
2. Test the water-motor alarm and/or electric alarm, by turning the alarm test valve (1A) to the open position. The alarm should sound. Turn to close position.
3. Depress the Drip Check (19B) to release accumulated water and to check main valve leakage (Significant water accumulation on the system side may indicate a sealing problem).

Semi-Annual Inspection

1. Complete Weekly and Monthly Inspection and Test.
2. Inspect the electric detection system and electric release control panel, as suggested by the release control panel manufacturer.

Annual Inspection and Test

1. Complete Weekly, Monthly and Semi-Annual inspections.
2. Place the system out of service (See "Removing The System From Service" above).
3. Trip the release-line system.
4. The interior of the Deluge Valve should be cleaned and inspected.
5. Place the system back in service. (See instructions "Placing the System in Service").
6. The Deluge Valve must be activated at full flow.

Note: The system will be flooded! Take all necessary precautions to drain water and prevent damage in the area protected by the system.

7. Trip-test the deluge system with an electric release control panel. The release may be tripped by the method suggested by the release control panel manufacturer.
8. The manual emergency release handle (15B) is to be pulled. The Deluge Valve should open and discharge water. Observe upstream Pressure Gauge (3A) while full flow is on. Inspect all system nozzles.
9. Take all additional measures as required by NFPA-25 "Standard for the Inspection Testing and Maintenance of Water-Based Fire Protection Systems."
10. Clean the priming strainer (4B) prior to resetting the Deluge Valve.

Abnormal Condition – Troubleshooting

1. Alarm Fails To Sound
 - A. Check for obstructions in the alarm test line.

Rev 14/5/04
By: D. Eshel





BERMAD Fire Protection

400E-2M/700E-2M IOM

- B. Clean the alarm-line strainer (if a water motor alarm is installed).
 - C. Make certain the alarm is free to operate.
 - D. Test the electrical circuit to the electric alarm (if utilized).
2. False Trip
- A. Check and test the electrical circuit to the Solenoid Valve (14B)
 - B. Check for Malfunctioning EMR device.
3. Leakage Through Deluge Valve
- A. Check for clogged priming strainer (4B).
 - B. Leaking control trim system.
 - C. Damaged deluge valve internal elastomer or seat
4. Deluge Valve Will Not Reset
- A. The EMR Device is clogged or not reset properly
 - B. Check for clogged priming strainer (4B), the screen should be properly cleaned.
 - C. Closed priming valve (18B).
 - C. Check for Foreign object lodged between seal and valve seat.
 - D. Control Panel is not reset. Check for Faulty circuits, using manufacturer instructions.
5. Difficulty in Performance
- Where difficulty in performance is experienced, BERMAD or its authorized representative should be contacted if any field adjustment is to be made.



Appendix: Maximum Elevation Above Valve for Bermad Deluge Valve with EasyLock Manual Reset

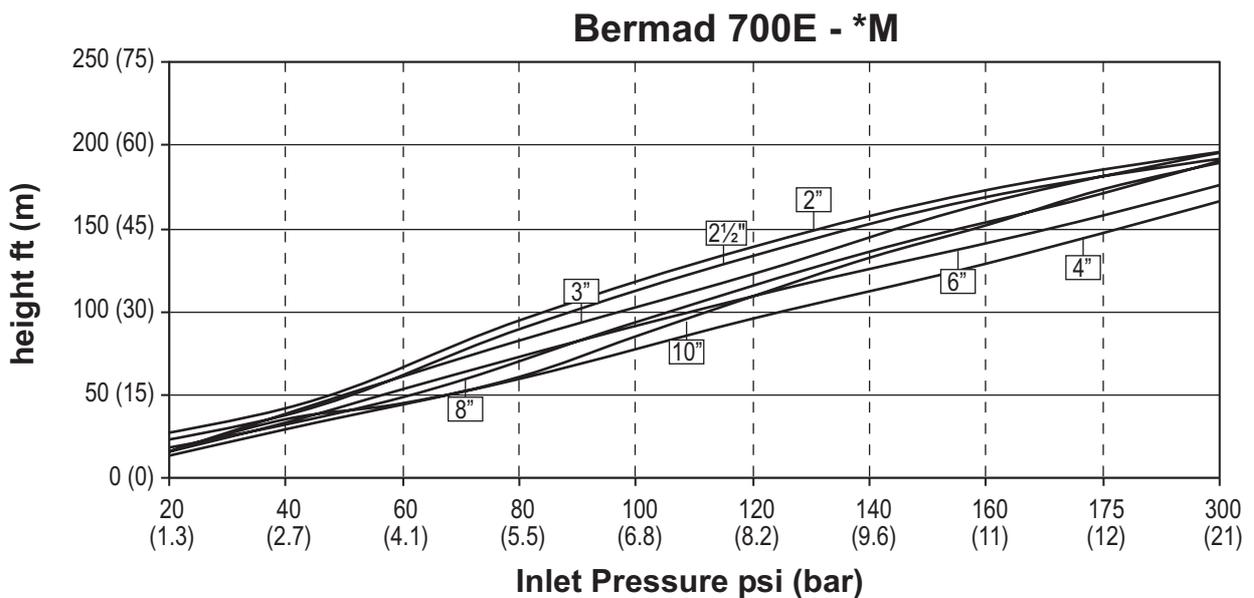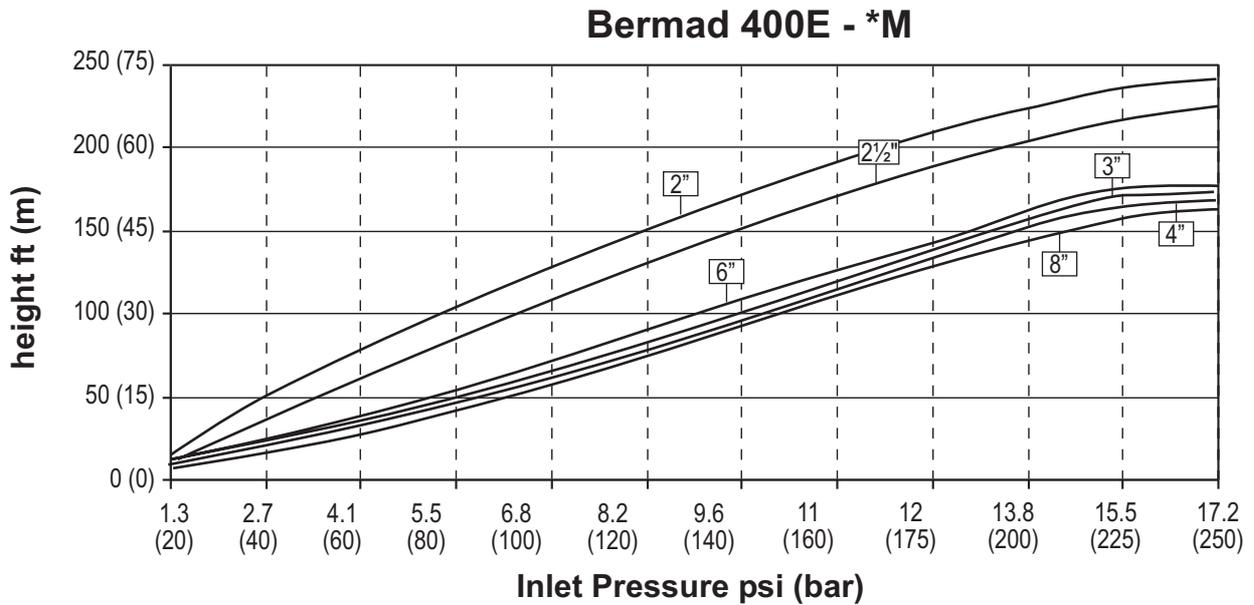


Note: *Applied to models 1M, 2M and 2MC only.

Model 400E 2M Electrically Controlled Deluge Valve with EasyLock Manual Reset

Sequence of Operation

Closed Position

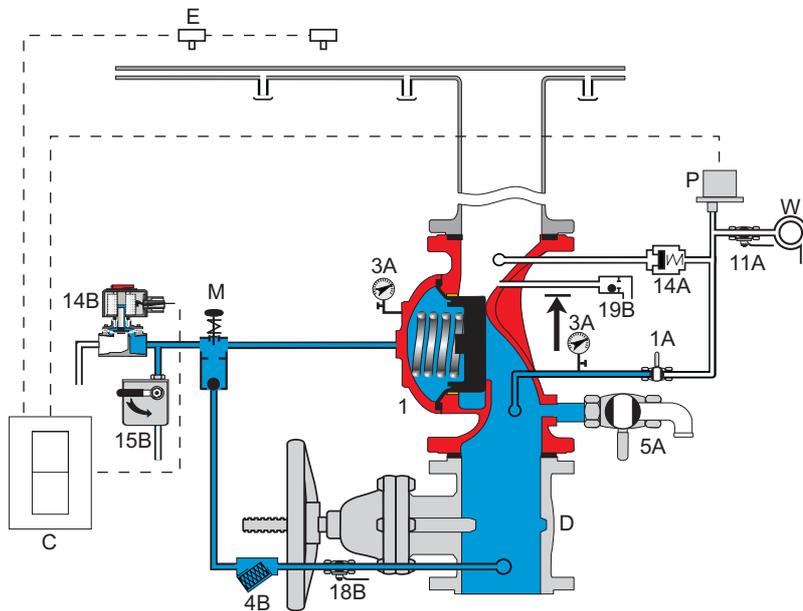


Legend:

- (1) Bermad 400E Main Deluge Valve
- (1A) Alarm Test Valve
- (3A) Pressure Gauge
- (4B) Priming Stainer
- (5A) Drain Valve
- (11A) Alarm Shutoff Valve
- (14A) Check Valve
- (14B) Solenoid Valve
- (15B) Manual Emergency Release Assy.
- (18B) Priming Ball Valve
- (19B) Drip Check
- (M) Manual Reset Device Assy.

Other System Items:

- (C) Releasing Control Panel
- (P) Pressure Switch (Option)
- (W) Water Motor Alarm (Option)

Open / Operation

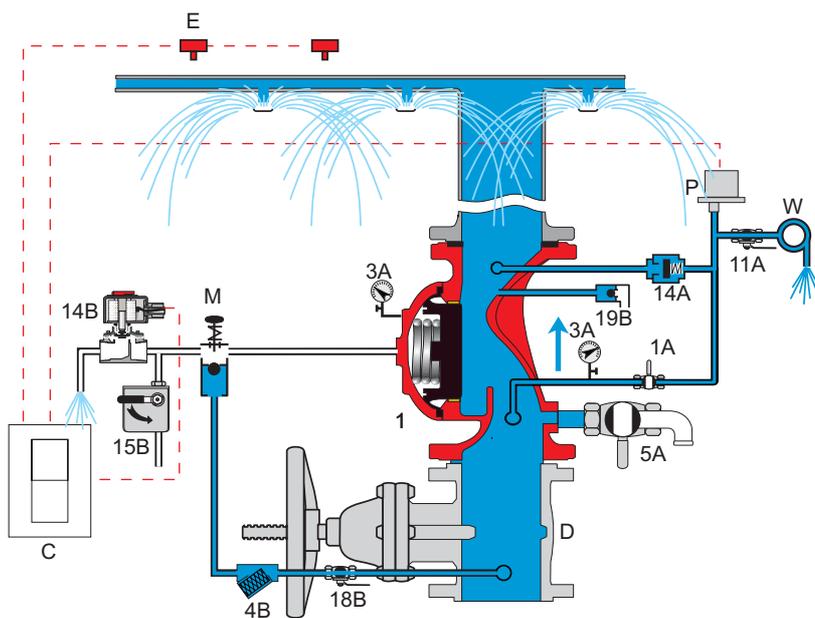


- Water under pressure
- Vented to atmosphere

Figure 1

Model 700E 2M Electrically Controlled Deluge Valve with EasyLock Manual Reset

Sequence of Operation

Closed Position

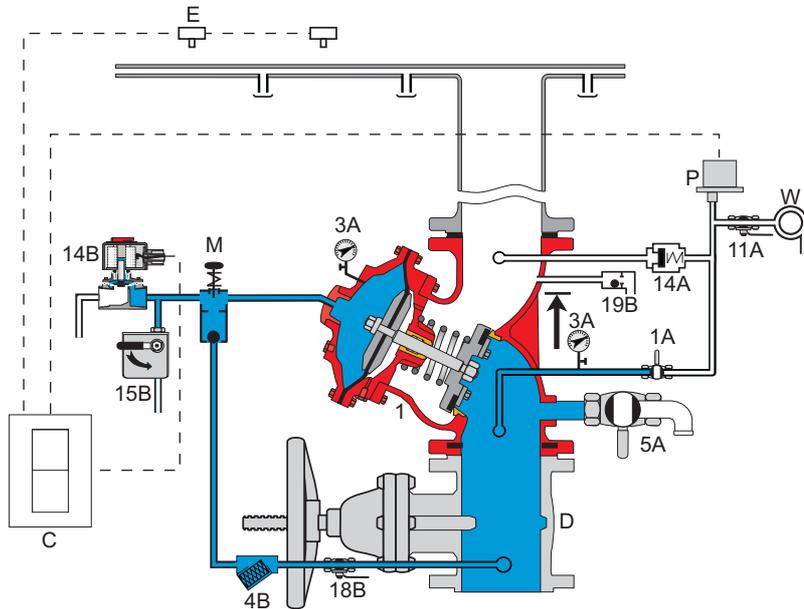


Legend:

- (1) Bermad 700E Main Deluge Valve
- (1A) Alarm Test Valve
- (3A) Pressure Gauge
- (4B) Priming Stainer
- (5A) Drain Valve
- (11A) Alarm Shutoff Valve
- (14A) Check Valve
- (14B) Solenoid Valve
- (15B) Manual Emergency Release Assy.
- (18B) Priming Ball Valve
- (19B) Drip Check
- (M) Manual Reset Device Assy.

Other System Items:

- (C) Releasing Control Panel
- (P) Pressure Switch (Option)
- (W) Water Motor Alarm (Option)



Open / Operation

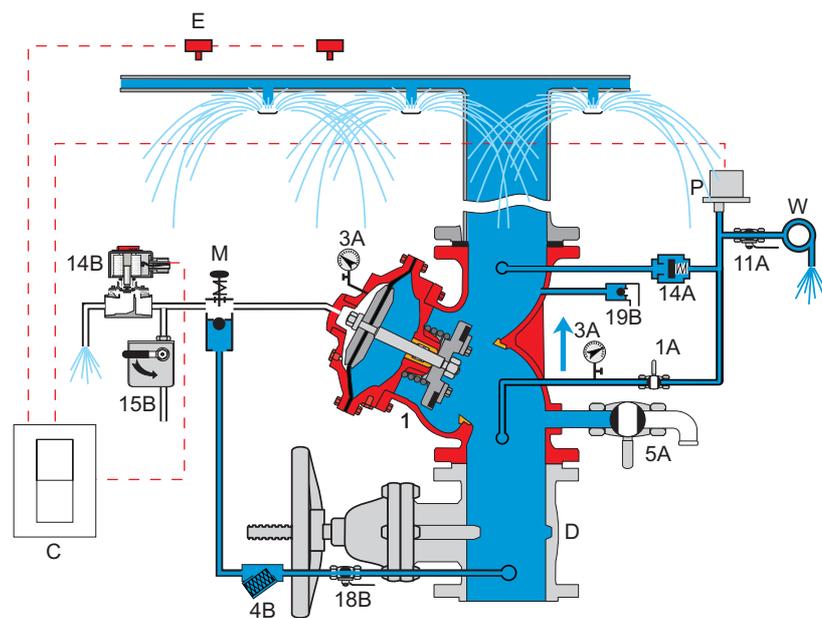

- Water under pressure
- Vented to atmosphere

Model: 400E 2M Electrically Controlled Deluge Valve with EasyLock Manual Reset

Trim Illustration Vertical Installation

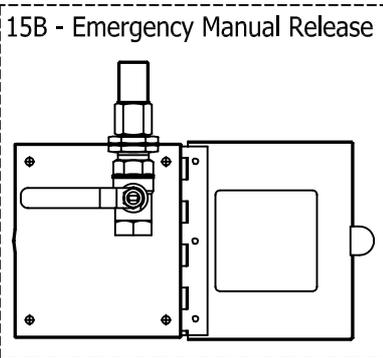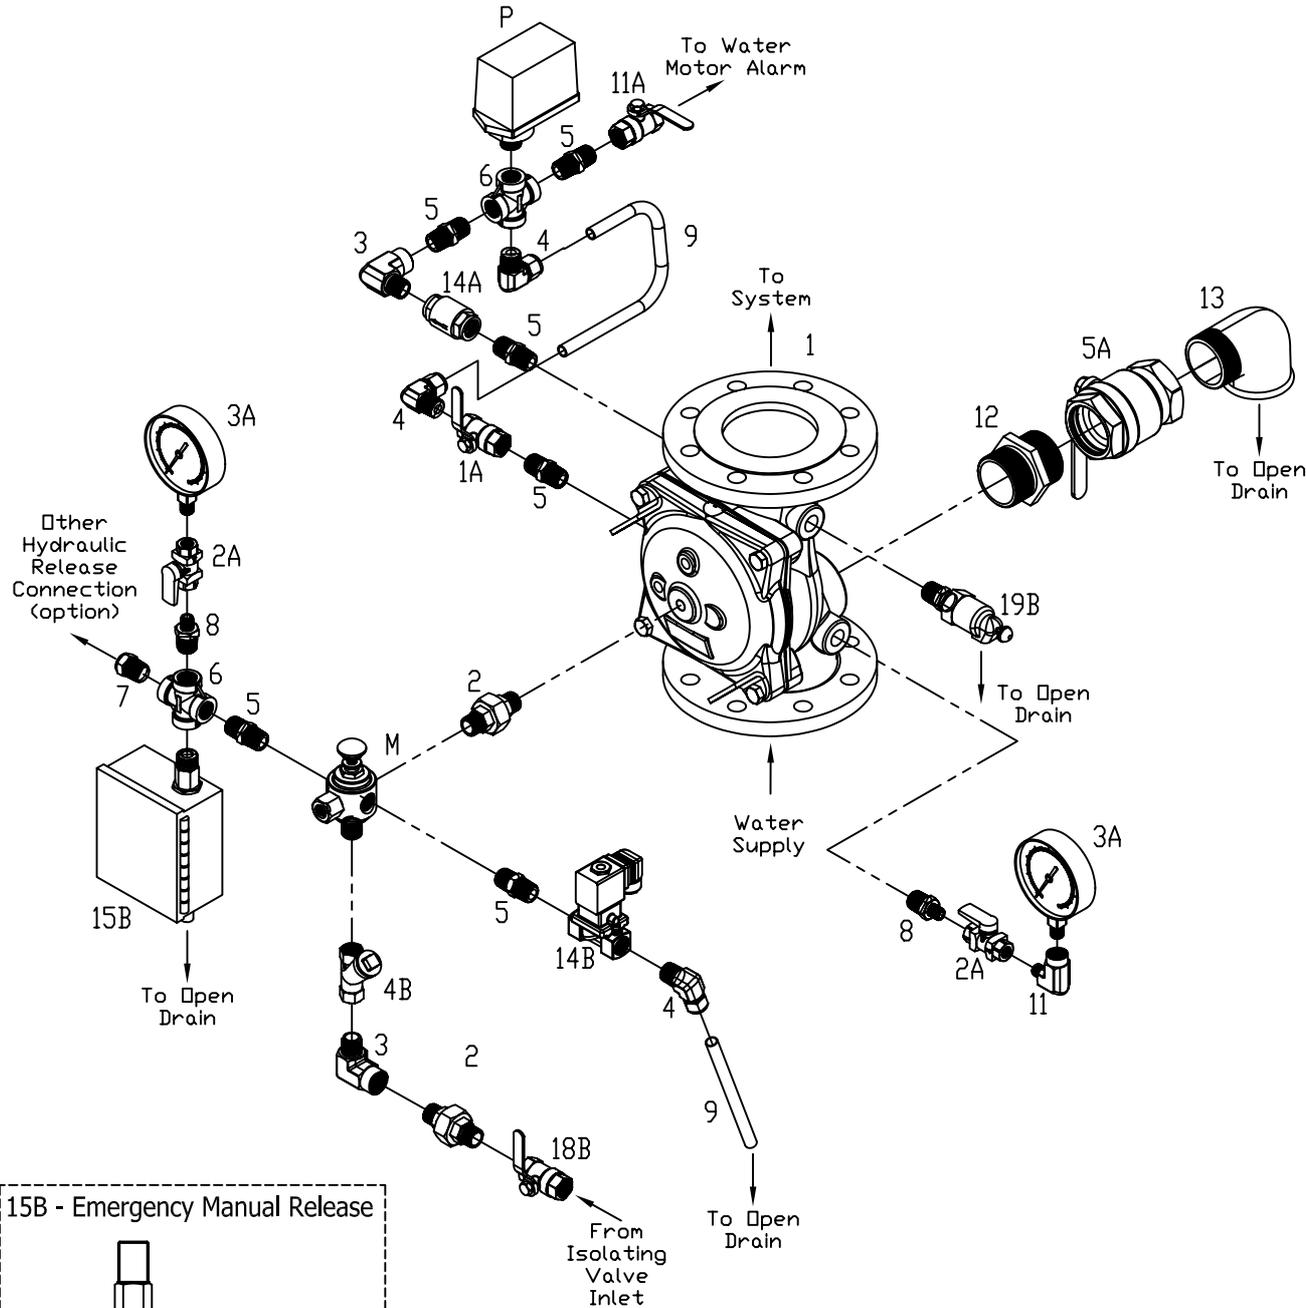

NOTE:
Valve must be trimmed as shown.
Any deviation in trim size or arrangement
may affect the proper operation of the valve.

**Bermad Electrically Controlled Deluge Valve
with EasyLock Manual Reset
Model: FP-400E-2M / 700E-2M
Trim Component List**

Item	Description	Qty	Note
1	MAIN DELUGE VALVE	1	
2	UNION 1/2"	2	
3	STREET ELBOW 1/2"	2	
4	MALE ELBOW 1/2"X1/2"	3	
5	NIPPLE 1/2"	6	
6	CROSS 1/2"	2	
7	PLUG 1/2"	1	
8	REDUCING NIPPLE 1/2"X1/4"	2	
9	TUBE 1/2"	1	
11	STREET ELBOW 1/4"	1	
12	DRAIN NIPPLE	1	4
13	DRAIN ELBOW	1	4
1A	ALARM TEST VALVE - 1/2" BALL VALVE	1	
2A	GAUGE VALVE 1/4"	2	
3A	PRESSURE GAUGE 4"	2	2
4B	PRIMING STRAINER 1/2"	1	
5A	DRAIN VALVE	1	1,4
11A	ALARM SHUTOFF VALVE - 1/2" BALL VALVE	1	
14A	CHECK VALVE 1/2"	1	
14B	SOLENOID VALVE 1/2" ASCO 8210G207	1	5
15B	MANUAL EMERGENCY RELEASE MODEL-D	1	1
18B	PRIMING VALVE - 1/2" BALL VALVE	1	
19B	DRIP CHECK	1	5
M	MANUAL RESET DEVICE ASSY.	1	5

Optional System Items:

P	PRESSURE SWITCH	1	5
W	WATER MOTOR ALARM	1	5

Notes:

- (1) Shall be UL Listed in accordance with UL 258
- (2) Shall be UL Listed in accordance with UL 393
- (3) Shall be UL Listed in accordance with UL 753
- (4) For 2" : 3/4" Drain Valve
For 2 1/2" & 3" : 1 1/2" Drain Valve
For 4" and larger : 2" Drain Valve
- (5) Shall be UL Listed for fire protection service
- (6) Construction material Brass/S.S 316 or corrosion resistant equivalent