

## Euromag MC608 Programming Guide – Firmware 3.45

Press 'menu' to enter the MAIN MENU, 'OK' to advance and '<<' to go back

**MAIN MENU** (use password: 231042 when prompted)



