




## C15, C35 - Combination Air Valve

### Installation, Operation and Maintenance Manual (IOM)

	
<p>2"; DN50 C15</p>	<p>2"; DN50 C35</p>
	

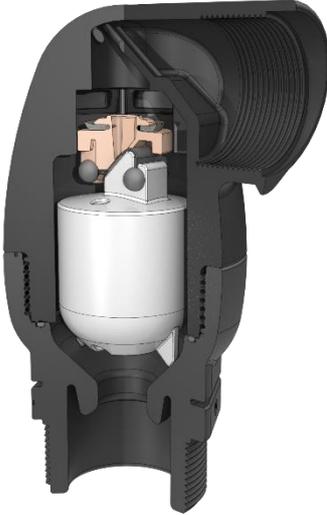

**Bermad**

Water Control Solutions

## Table of Contents

General	Page 3
Safety	Page 3
Operational Data	Page 3
Materials and Connections	Page 3
C15 / C35 – Parts List	Page 4 - 5
Unpacking and post shipment - Inspection, Site Preparation, Installation	Page 6
Operation - Start-up and first operation, Operation Principals	Page 7
Maintenance - Inspection, Troubleshooting	Page 8
Disassembling & Reassembling	Page 9 - 12



## General

BERMAD C15/C35 is a high quality combination air valve for a variety of water networks and operating conditions. It evacuates air during pipeline filling, allows efficient release of air pockets from pressurized pipes and enables large volume air intake in the event of network draining.

With its advanced aerodynamic design, this double orifice valve provides excellent protection against air accumulation and prevents vacuum formation with improved sealing at low pressure.

This document serves as the Installation, Operation and Maintenance Manual (IOM) of this valve; it describes the procedures required for proper usage of the valve.

## Safety

Since air valves operate in pressurized water systems, you are required to carefully read this manual before using the valve. Handle the valve with care and make sure to comply with all the relevant required safety instructions and standards, general and local.

## Operational Data

Pressure rating	<b>C15</b> - ISO PN10, ANSI / ASME 150 <b>C30</b> - ISO PN16, ANSI / ASME 150
Operating pressure range	<b>C10</b> - 0.1 -10 bar / 1.5 - 150 psi <b>C35</b> - 0.1 -16 bar / 1.5 - 230 psi
Operating temperature	Water up to 60°C/ 140°F


## Materials and Connections

Body material	Glass-reinforced Nylon
Inlet diameter	2"; DN20
Connections	Threaded Male BSPT, NPT
Outlet types	sideways with 1½"; DN40 Female Thread



## C15 Part List


AV SERIES  
C15 COMBINATION AIR VALVE  
Size 2";DN50

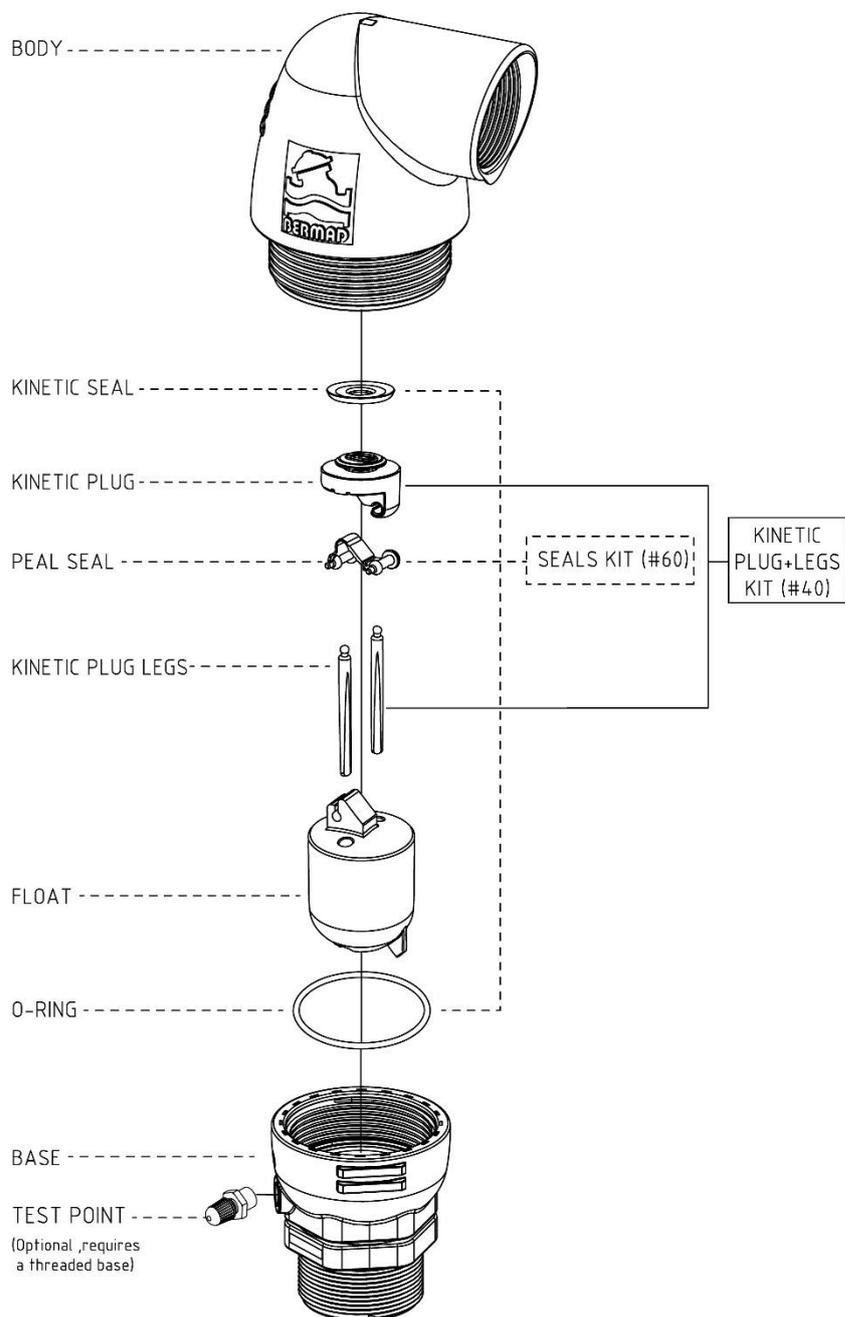



## C35 Part List

AV SERIES  
C35 COMBINATION AIR VALVE  
Size 2"; DN50

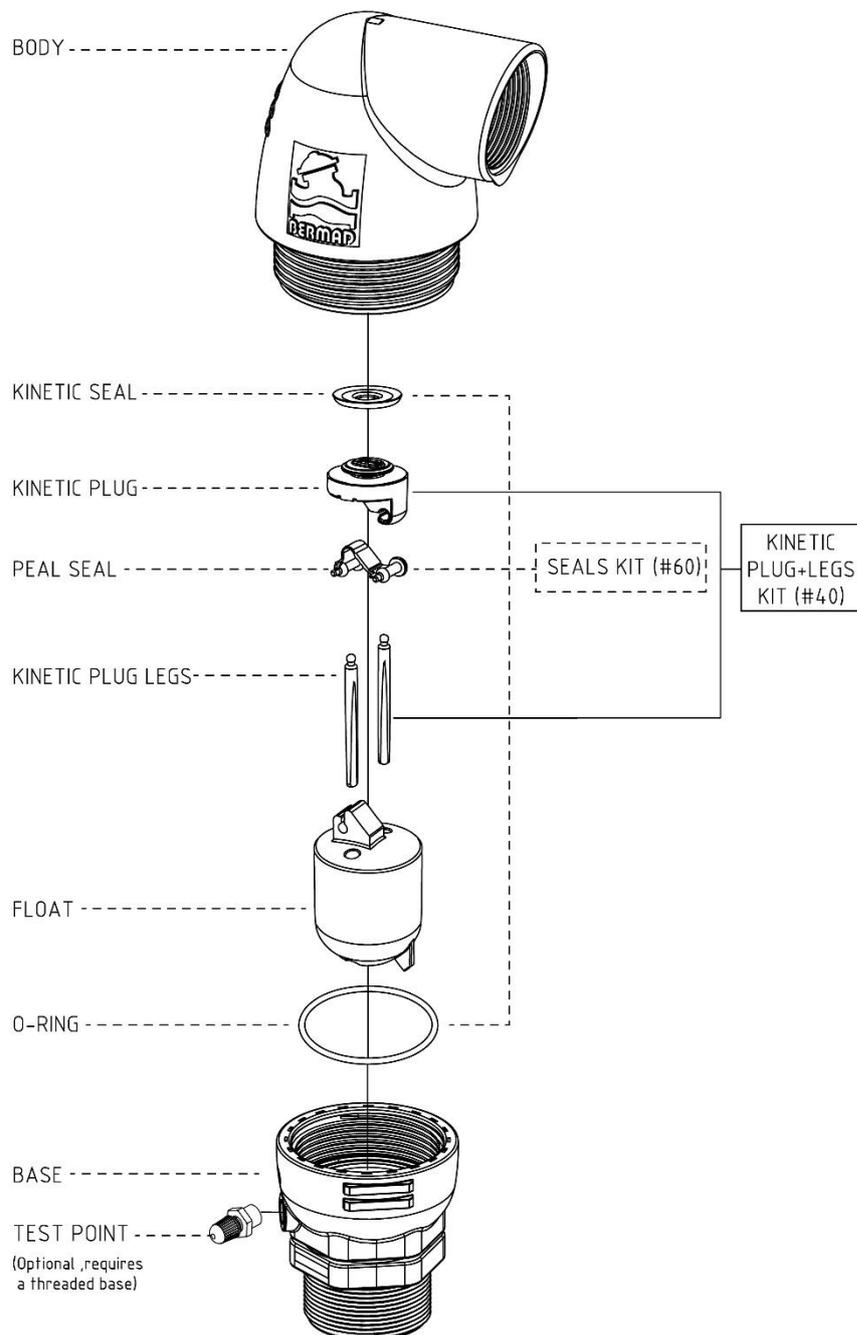



**Bermad**

Water Control Solutions

## Unpacking and post shipment inspection

- Make sure that until the actual installation the valve remains dry and clean in its original package.
- Unpack the valve and make sure that all the wrapping materials are removed.
- Before installation it is necessary to inspect that no damage to the valve occurred during shipment; **do not install a damaged valve!**
- Verify that the valve to be installed meets the design specifications of the specific installation site; take extra care in making sure that the expected system pressure complies with the pressure rating of the valve.

## Site Preparation

- Air Valves located above ground should be protected from freezing, contamination and vandalism.
- If the valve is to be installed in a pit, make sure that the pit has proper drainage and sufficient dimensions for servicing the valve.
- Flush the pipeline prior to the Air Valve installation in order to prevent damage to the valve internals due to large debris carried by the water during startup
- The C30 / C31 air valves are not to be used in systems containing high suspended solids; consider selecting other BERMAD Air Valve models for such water type.

## Installation

### Typical Applications

- Main Irrigation Networks – Air relief, protection against air accumulation and vacuum formation downstream of pumps, along supply lines and at elevations in main irrigation networks.
- Irrigation Control Heads – Air relief, protection against air accumulation and vacuum formation at filtration and fertilization stations and downstream of main control valves.
- Infield Systems – Protection against air accumulation and vacuum formation in proximity to water meters and automatic regulators.
- Landscape Irrigation – Protection against air accumulation and vacuum formation.

Please note:

1. If required a Down Outlet and a Connection to a Drainage Pipe can be fitted to the 2" / DN50 valve's outlet.
2. Depending on the specific installation requirements a Surge Protection (SP) or an Inflow Prevention (IP) device may be added to the air valve.



**Bermad**

Water Control Solutions

## **Installation instructions**

- Install the Air Valve as close as possible to the pipe, at a high point of its circumference, in vertical position (within 5 degrees of vertical alignment) and with its inlet facing down.
- The diameter of the pipe connecting the Air Valve with the pipeline should be at least equal to the Air Valve inlet diameter.
- Install a shutoff valve between the air valve and the pipeline for allowing easy inspection and maintenance.

## **Operation**

### **Start-up and first operation**

- Open the shutoff valve and verify that the Air Valve connections are not leaking; if needed follow the troubleshooting instruction section of this document. Please note that at the first time the valve is filled up some water may exit through its outlet port.
- Prevent water hammer during startup and pipeline filling by maintaining the velocity lower than 0.5m/sec (1.6 feet/sec). Consider adding the Surge Protection feature in systems where higher velocity is expected.

### **Principles of Operation**

#### **Pipeline Filling**

During the filling process of a pipeline, high air flow is forced out through the kinetic orifice of the air valve. Once water enters the valve's chamber, the float buoyed upward causes the kinetic orifice to close. The unique aerodynamic structure of the valve body and float ensures that the float cannot be closed before water reaches the valve.

#### **Pressurized Operation**

During pressurized operation of the pipeline, air accumulates in the upper part of the air valve chamber, causing the float to gravitate downwards. This in turn causes the automatic orifice to open, releasing the accumulated air. Once the air is discharged, the water level and float rise, causing the automatic orifice to close.

#### **Pipeline Draining**

When a pipeline is drained, a negative differential pressure is created causing atmospheric air to push the float down. The kinetic orifice stays open and air enters the valve chamber, preventing vacuum formation in the pipeline.



**Bermad**

Water Control Solutions

### **Please note**

- During initial valve filling as well as during the automatic air release some water may exit through the valve outlet.
- To ensure a completely dry environment near the air valve, a drainage pipe can be mounted on the valve cover

## **Maintenance**

### **Inspection**

The valve does not require any specific maintenance, however a periodical inspection of the seals is recommended for removing debris and foreign objects.

### **Troubleshooting**

<b>Symptom</b>	<b>Action</b>
Leakage at the inlet connection	Tighten the valve connection, use thread sealant. Check whether any part is damaged.
Leakage at the valve body	Tighten the valve's body, check the O-Ring
Leakage at the valve's outlet	Disassemble and inspect the valve's orifices, float and seals. Flush the valve to remove debris, Remove any foreign objects, check and replace any damaged part.
Valve does not release air or allow air intake	Verify that the operation pressure does not exceed the valve's rated working pressure. Check and removed foreign objects, Clean the valve's internal parts, replace if necessary. Consult BERMAD if the symptom continues.



**Bermad**


Water Control Solutions

## Disassembling C15 / C35

1. Release the valve's cover (Part #2) by turning it counterclockwise, un-screw and remove it from the valve's base (Part #1). Make sure that the valve parts, seated within the cover do not fall out of the cover.
2. Inspect the valve basis O-Ring (Part #5011) and if necessary replace it with a new one. Make sure that the new O-Ring is seated correctly in its designated groove in the valve's basis.
3. Pull the float assembly (Part #3) out of the valve's cover.
4. Disconnect the Kinetic Plug (Part #4) from the Float (Part #3) using its Snap Legs.
5. Inspect the float's peal seal (Part #5 or #18) and the float (Part #3) for wear and tear.
6. If necessary replace the old parts.


## Reassembling C15 / C35

1. Wet the Kinetic Seal with water and install it on the Kinetic Plug with its raised edges side facing upward. See figure A.

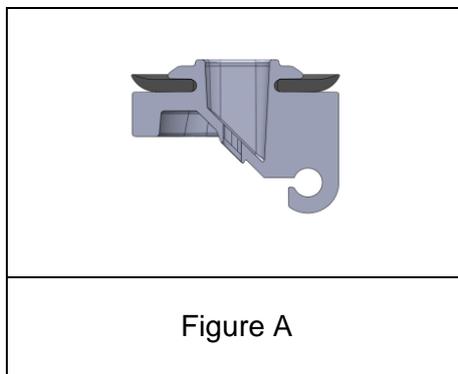





2. Wet the new peal seal with clean water .Use the Insertion Assistance Handle and insert the peal seal to its designated groove in the kinetic plug as shown in Figure B.

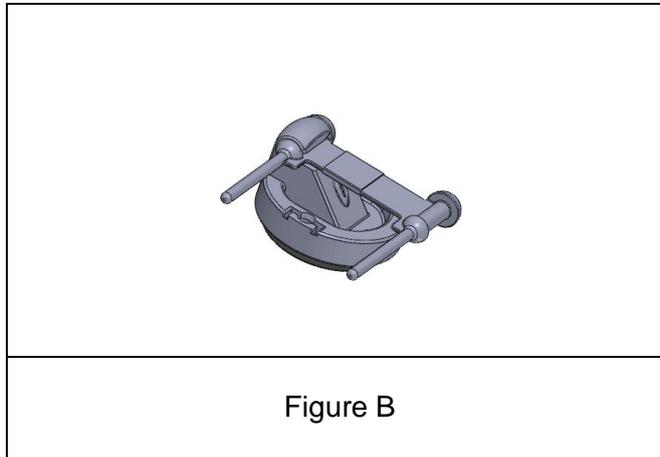

3. Use the Insertion Assistance Handle and insert the peal seal to its designated groove in the automatic float, insert the "legs" to the kinetic plug and then to the 2 holes in the automatic Float, See Figure C.

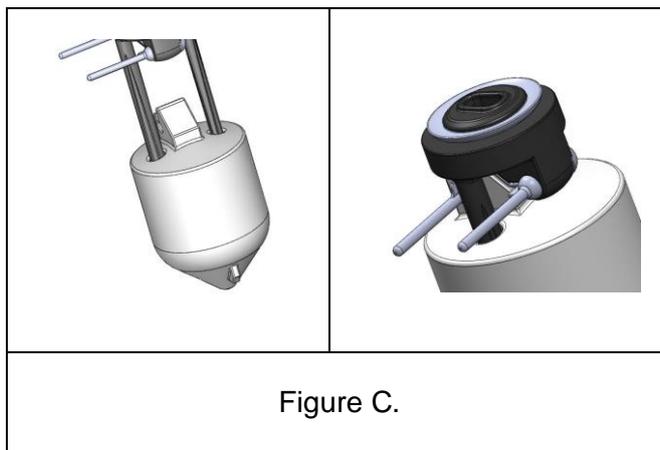

4. Once the Peal Seal is correctly seated in place, cut the insertion assistance handles and discard them, See Figure D.

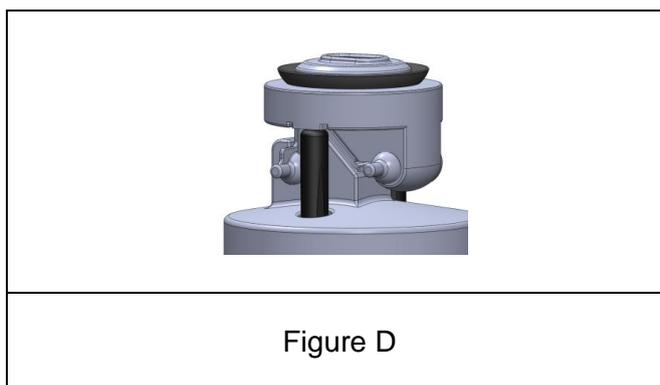





3.2 Take the kinetic plug which includes the automatic orifice and O-Ring. Connect the 2 "legs" to the kinetic plug, See Figure G.



3.3 Insert the "legs" to the 2 holes in the automatic float, See Figure H.

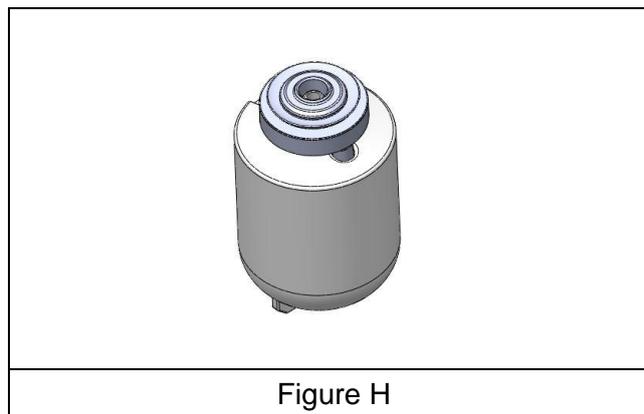


4. Make sure that the valve's basis O-Ring is fully inserted to its groove within the basis. See Figure I.

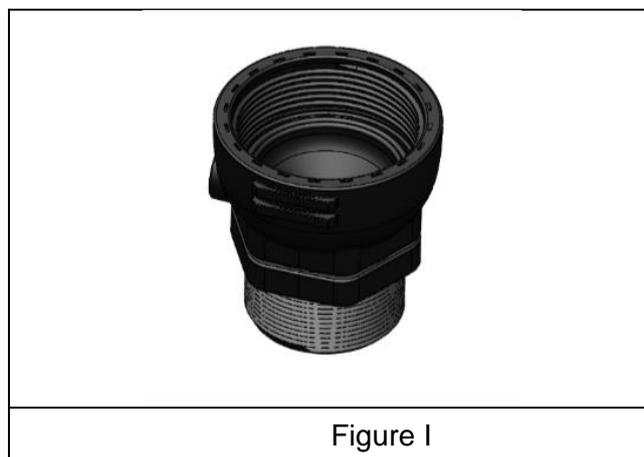




5. Insert the complete float assembly to its place in the Valve Cover, See Figure J

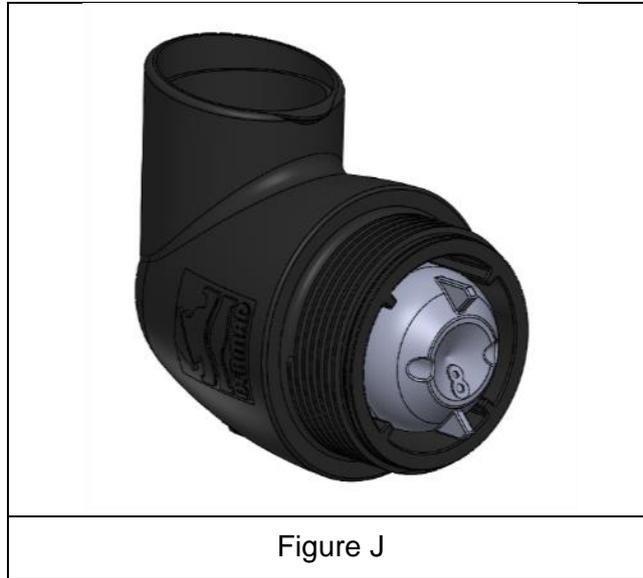

6. Reassemble the valve cover to the valve basis by screwing it on the basis thread. Tighten the cover till the BERMAD logo is parallel with the wrench flats of the basis, See Figure K.

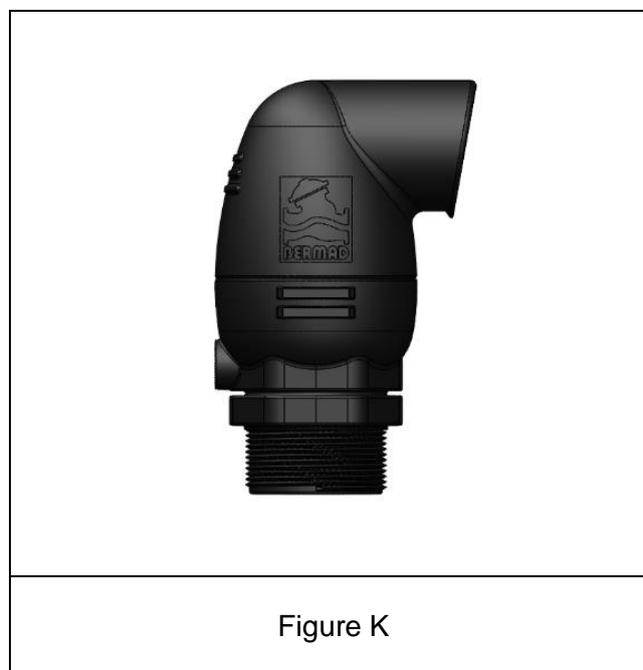

7. Once the valve is reassembled; perform a complete start up procedure as described above.