





1 | Disassembling the actuator from the valve

Α.

Disconnect the control tube.



B.

Turn the actuator counter clockwise. (If necessary, use a suitable wrench or spanner.)



Pulling gently upwards, slide the actuator out of the valve body.







2 | Replacing the seal

Α.

Using two 13/19mm wrenches, release the closure locking nut.



В.

Remove the plug washer and then remove the seal.

Check the condition of the seal and replace as required.



Replace the components of the closure assembly in the order shown here, frombottom to top. Pay attention to the position of the parts and their direction according to the different models (Angular model - black cover; Straight model - gray cover).

Angle Flow Model		Straight Flow Model	
			9
15 Nut		15 Nut	
18 Disc	0	18 Disc —	
05 Black Plug		02 Gray Plug —	
04 Dynamic Seal —	i	04 Dynamic Seal	
20 0-Ring		20 0-Ring	le.
02 Gray Plug —		05 Black Plug —	
18 Disc		18 Disc	



Tighten the closure nut to ensure locking. Use OMNIFIT 200M or similar glue



Ε.

Check the condition of the actuator O-ring and replace as required.



F.

Apply a sillicon lubricant on the O-ring and thread when fitting the actuator onto the valve body.





3. Replacing the diaphragm


Α.

Using two 13mm wrenches, open the 12 bolts of the closure assembly.



В.

Remove the cover. Pay attention to the position of the parts and their direction according to the different models (Angular model - black cover; Straight model - gray cover).

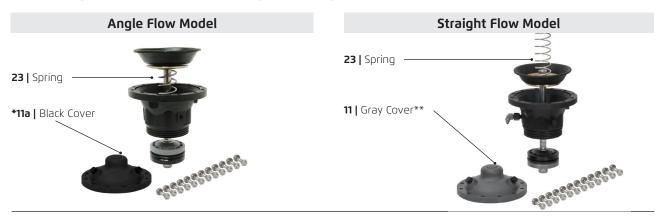

Pulling gently, slide the shaft out of the separation partition.





D.

Open the locking nut with the aid of two wrenches - a 17mm spanner and 13mm spanner.



Remove the diaphragm washer. Check and replace diaphragm as required.



F.

Reassemble the diaphragm assembly, paying attention to the order of the parts and their position in accordance with the type of model.

Use a suitable type of glue to ensure locking of the shaft nut.





4. Replacing the Shaft Seals

Α.

Using a suitable tool, remove both shaft O-rings from the separation partition. Replace them with new ones as required.



Use a silicon lubricant when reassembling the shaft.







5. Replacing the seats

Α.

Using a suitable wrench, open the Cover Ring by turning clock-wise.



В.

Using a screwdriver, separate the valve body assembly from the lower adaptor assembly.



Inspect the seats visually. In case of damage, go tonext step (C). **7 |** Upper Seat **7 |** Lower Seat



D.

Ensure that O-Ring (26) is in place before closing.

Check the condition of the seat and of the seal, and replace as required.



Ε.

Check the condition of the lower adaptor seal and replace as required.



F.


Reconnect the lower adaptor to the valve body.







Plastic Backwash Filter Valves, Double Chamber, Straight/Angle & Reverse Flow -

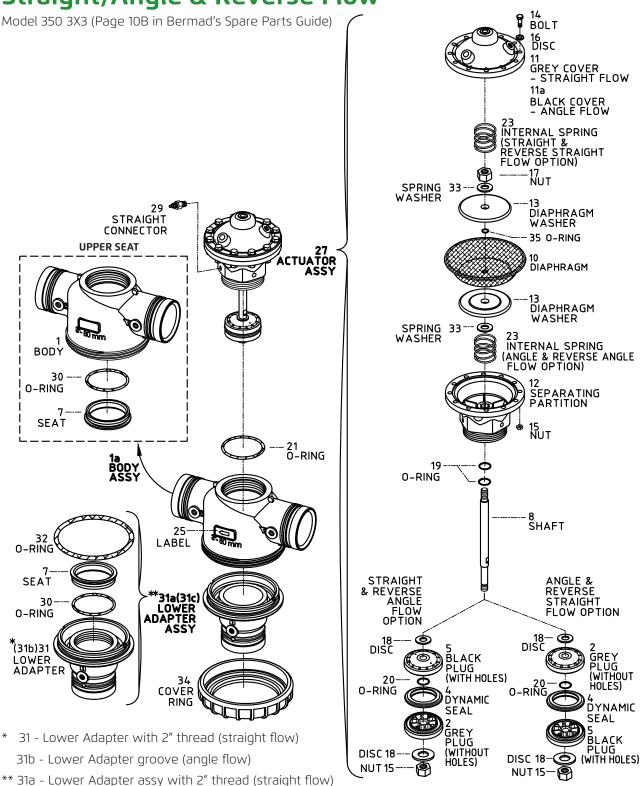

31c - Lower Adapter assy groove (angle flow)

When ordering please mention page no 10B



